



FS5000
Signals as defined
by Brooke Clark.
Not all lines connected,
as not all functions

COMPUTER
This connects to an IBM PC computer printer port.
D0-7 are the 8 data lines.
C0-3 are the 4 control lines.
S3-8 are the 5 status lines.

RAY ROBINSON VK2ILV

Title		
FS5000 ADAPTER BOARD		
Size	Number	Revision
A431	MARCH 2005	V1.3
Date:	28-Jul-2008	Sheet of
File:	A:\FS5000.B02	Drawn By: